

Parasene
 'SUPER WARM' GREENHOUSE HEATER
 MODELS 681 'Super Warm 4' - MODEL 682 'Super Warm 5'

ASSEMBLY INSTRUCTIONS


1. Fit lugs on spreader cover (slotted top) into slots in heat spreader, then twist tabs to secure using a pair of pliers.
2. Insert burner(s) into fuel tank with gasket(s).
3. To assemble the chimneys(s) and top spreader, lay on a flat surface and push chimney(s) onto the fixing clips. The chimney(s) may then be fitted onto the burner(s).

For details of illustrations please turn over

OPERATING INSTRUCTIONS



1. Fill tank with 4.5 Litres (1 Gallon) maximum of premium grade paraffin to BS 2869 Class C1. Leave 10mm (1/2") air space in top of tank.
2. Allow at least one hour for the wicks to absorb the paraffin. DO NOT light a dry wick.
3. Secure heater to the ground by positioning enclosed support legs evenly around fuel tank and secure with appropriate fixings.
4. Light wicks in low position.
5. Fit chimney(s) and assembled heat spreader with guard, adjust flame as illustrated (the heat spreader clips to the top of the chimney(s)).
6. Check the height of the flame after approx. 5 minutes and again at 15 minutes, adjust as necessary to make sure you have a smokeless flame.
7. To extinguish flames, use the snuffer level by pushing downwards.
8. Surplus charring on the wicks should be removed with a light brush or a duster.
9. When operating, the tip of the flame must not be above the centre bridge of the burner. If used on a higher flame setting the wicks will dry out and smoking may occur.
10. It is important, even on cold days and nights, to have ventilation. Otherwise the burners can be starved of oxygen and the flame will die down. Allow a minimum of 38cm² (6 Inch²) of opening for adequate ventilation. Draughts should of course be avoided.
11. Before refilling the heater extinguish the flame by turning the control knobs anti-clockwise and blow through hole in heat spreader.
12. Always use a clean dry container and funnel to store and transfer paraffin.
13. Before lighting new wicks (or old wicks after a period of disuse) Remove wicks from burner and allow to dry.
14. If the wick is damp the siphoning action will not commence. Then refit the wicks and allow them to absorb the paraffin (see 2).
15. With Super Warm 5, Model 682, one burner only may be used in mild conditions, but both wicks in that burner should be lit.
16. Always keep the tank well supplied with paraffin to ensure wicks are well immersed, otherwise the wicks can be starved of paraffin, the flame will die down and smoking may occur.
17. When heater is not in use in the summer months, empty the tank and store in a dry environment

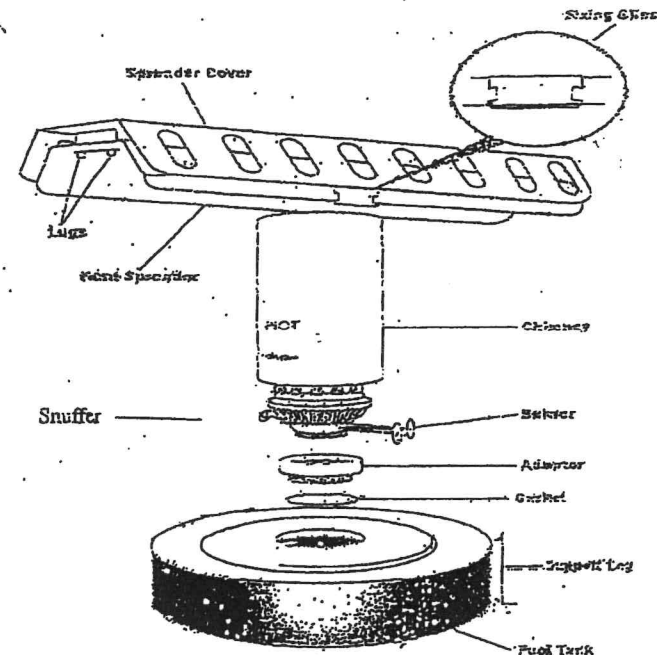

WARNING

- FILL THE HEATER THROUGH THE BURNER HOLE ONLY WHEN THE BURNER IS EXTINGUISHED
- THIS HEATER IS DESIGNED FOR GREENHOUSE USE ONLY.
- DO NOT POSITION THE HEATER CLOSER THAN 1 METRE (3') FROM ANY ADJACENT SURFACES.
- DO NOT TOUCH THE CHIMNEY OR HEAT SPREADER WHEN IN USE (THEY GET HOT) AND ALWAYS USE PROTECTIVE GLOVES.
- KEEP CHILDREN AND PETS AWAY FROM THE HEATER.
- WIPE OFF ANY SURPLUS PARAFFIN.
- BEFORE RELIGHTING OR REFILLING, ENSURE CHIMNEY IS COOL.
- KEEP BURNER CLEAN.
- USE ON A DRY LEVEL SURFACE.
- DO NOT CARRY OR FILL WHEN ALIGHT.
- USE ONLY PREMIUM GRADE PARAFFIN TO BS 2869 CLASS C1.
- DO NOT USE ANY OTHER FUEL.
- DO NOT OVERFILL TANK.
- DO NOT LET WATER ENTER FUEL TANK.
- DO NOT USE IN A DWELLING - THIS IS NOT A DOMESTIC HEATER.
- ENSURE THE HEATER IS SECURED TO THE GROUND BEFORE USE.
- DO NOT USE AS A COOKER.
- DO NOT USE IN AN UNVENTILATED PLACE WHICH COULD PREVENT SATISFACTORY DISPERSAL OF THE PRODUCTS OF COMBUSTION OR WHERE EXPOSED TO DRAUGHTS.
- DO NOT USE CONTAINERS THAT HAVE HELD PETROL OR METHYLATED SPIRIT.
- WE RECOMMEND THE USE OF PARASENE PARAFFIN.